## **L**legrand

## adaptable DLP trunking 50 x 195 trunking and fittings

runking and



length: 2 m

 $\mathbf{\Theta}$ 

Selection chart (p. 706) Wiring capacity chart (p. 726)

cover is fitted

\_

Flat angle

End cap

F

90° flat angle

Left or right end cap

Changeable internal angle, from 85° to 95° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings

Changeable external angle, from 60° to 120°
for 50 x 80/50 x 105/50 x 150 and
50 x 195 mm trunkings

Pack	Cat.Nos	Single compartment trunking	Pack	Cat.Nos	Junctions
8(1)	1 comp. Cover 180 A 104 52	<b>Body</b> 195 50 x 195 mm	5 5	107 35 107 37	Flat junctions     To tap-off to an 80 mm wide trunking     To tap-off to a 105 mm wide trunking
		Supplied without cover Length 2 m Flexible cover Fits onto the whole trunking including in internal or	5	107 36	equipped with a 65 mm cover To tap-off to a 105 mm wide trunking equipped with an 85 mm cover
8(1)	105 26	external angles Length 2 m Full cover width 180 mm	5	107 63	Angled junction To tap-off in an internal angle to $35 \times 80$ , $35 \times 105$ , $50 \times 80$ or $50 \times 105$ mm trunking
24 <sup>(1)</sup>	105 82	Partition Length 2 m Separation partition			Used with an internal angle Cat.No 106 02, 106 06 or 106 50
		Joints			Accessories
20	106 92	Body joint, attached with adhesive (fit at the end of installation)	50	106 82	Clip for 40, 65 and 85 mm covers
20	106 91	Body joint For aligning bases during installation	50	106 86	Clip for 180 mm cover
10	108 06	Cover joint	100	308 81	Base for clamp
		7			
		Angles and end cap			Installation accessories (p. 724)
		Internal and external angles Include the 2 components for the top and bottom of the trunking on which the flexible cover is fitted			

10

10

2

5

106 02

106 22

107 92

107 07